

DMS North America

Unit P-Q-R
3225, de L'Industrie
St-Mathieu-de-Beloeil, QC
J3G 4S5
Tel: (415) 462-1575
Fax: (450) 281-2100



Visit our new website at
www.dmsnorthamerica.com

DISCLAIMER

THESE INSTRUCTIONS ARE DESIGNED TO SUIT
DMS SUSPENSION KITS. DMS OR ITS AFFILIATES ARE NOT
RESPONSIBLE FOR ANY FAILURES OR DAMAGE AS A
RESULT OF IMPROPER INSTALLATION OR SETUP.

IT IS **IMPORTANT**
THAT THESE INSTRUCTIONS ARE
READ CAREFULLY BEFORE USE AND SETUP.

DMS SHOCK ABSORBERS ARE DESIGNED FOR COMPETITION AND
HIGH END USE. AS SUCH THESE UNITS WILL REQUIRE
MAINTENANCE AND REBUILDS FROM TIME TO TIME BASED ON
USAGE AND CONDITIONS.

IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT
YOUR LOCAL DISTRIBUTOR OR MANUFACTURER.

www.dmsnorthamerica.com/distributors

DMS North America

Unit P-Q-R
3225, de L'Industrie
St-Mathieu-de-Beloeil, QC
J3G 4S5
Tel: (415) 462-1575
Fax: (450) 281-2100



Visit our new website at
www.dmsnorthamerica.com

TOP MOUNT RUBBER INSULATOR INSTALLATION

Urethane Insulator Installation

Step 1.

DMS supplies two different rubber isolator rings depending on installation application. These rings are meant to fit **INSIDE** OEM top mounts while centering the supplied DMS Progressive springs for a proper installation.



Step 2.

Standard OEM mount (may vary slightly depending on application) as viewed from the **UNDERSIDE**



Step 3.

Install DMS Urethane adapter ring as show into the OEM mount. The mount is now ready to accept the DMS Spring and shock absorber.





*****CAUTION:** Before driving on the road, be sure all bolts are tightened to OEM factory recommendations. ***

*****CAUTION:** Use torque wrench to check wheels are tightened to OEM recommendations for your specific wheel manufacturer. ***

*****NOTE:** All settings recommended in this manual are intended for basic starting points. We do not assume that they will be correct for every application. Settings are based on the following car sets and spring rates:

DMS SHOCK ABSORBERS ARE DESIGNED FOR COMPETITION AND HIGH END USE. AS SUCH THESE UNITS WILL REQUIRE MAINTENANCE AND REBUILDS FROM TIME TO TIME BASED ON USAGE AND CONDITIONS.

If you have any problems or questions please call your local trained DMS representative or DMS North America.
All contact info is on www.dmsnorthamerica.com/distributors